


## Power supply



USB-C socket located at the back of the device for charging the device

- 1 / To charge the battery, connect the device to a power source using the provided electric charger and cable.
- 2 / Insert the USB-C cable into the socket located at the back of the device.
- 3 / When the battery starts to charge, the battery icon on the panel will flash.
- 4 / When the battery is fully charged, the battery icon will turn off.
- 5 / The battery icon will start to illuminate in red when the battery level drops to 10%. 



**Caution!** Owners manual instructions must be read before use and the safety instructions observed.

Please check the recommended settings for your specific watch model provided by the watch manufacturer before configuring the watch winder.

## Placing and removing the watch



To remove the watch holder from the device gently press both holders



- 1 / Before inserting or removing a watch, it is important to set the device to pause mode to ensure that the watch winder cassette is not in operation.
- 2 / To remove the watch holder from the device, gently press both holders.
- 3 / Insert the watch onto the holder in such a way that it fits securely and is not loose. The watch holder has an adjustable feature that allows you to accommodate watches with different bracelet or strap diameters. Simply squeeze the holder before inserting the watch, and it will automatically adjust to the diameter. You can also decrease the size of the holder by squeezing it until it locks at the minimum diameter. To enlarge the holder again, press the two buttons simultaneously located on the holder to release the spring.

## Operating instructions



Choose and touch between 450, 650 and 800 turns per day according to your watch requirements



Press for 3 seconds to turn on or turn off the device  
Press briefly to start (green light) or stop (red light) winding the watch program



Choose and touch between left (L), right (R) or both (L+R) directions rotations according to your watch requirements

- 1 / To turn the device on or off, press and hold the center button for 3 seconds. When the device powers on, the center button will illuminate in red, and the preprogrammed settings will be displayed, which include 650 TPD (Turns Per Day) in both directions.
- 2 / Please insert the watch into the device following the instructions
- 3 / Please set the device according to the manufacturer's requirements for the specific watch model.

- 4 / To set the number and direction of rotations, press the desired parameters on the touch panel (the selected parameter will be highlighted). Regarding the number of rotations, the user can choose between 450, 650, or 800 rotations per day. As for the direction of rotations, the user can choose between rotating the cassette to the left (L), to the right (R), or alternating in both directions (L+R).
- 5 / After selecting the desired settings, briefly press the center button. The device will be unpaused, and the watch winder cassette will start operating. The LED on the center button will illuminate in green, indicating that the device is functioning.



**Caution!** Owners manual instructions must be read before use and the safety instructions observed.

Please check the recommended settings for your specific watch model provided by the watch manufacturer before configuring the watch winder.